

TOUCH SWITCH CONTROL SYSTEM INSTRUCTIONS


VER: 3.6

SPECIFICATIONS:


1. Voltage: 12V
2. Maximum Total Current: 80A
3. Maximum Single Output Current: 20A

INSTALLATION STEPS:

- 1, Turn off the engine and remove the key.
- 2, Find a suitable place within the engine bay to mount the control box. Ensure that the RED(+) terminals reach the appropriate battery terminals.(A)
- 3, Mount the switch panel in a suitable position inside the cab.
The switch panel can be fixed with double adhesive tape on the back or use the mounting bracket. And installed more than one direction(vertically or upside down).
- 4, Locate a grommet through the firewall and pass the switch wire through the pierced grommet to the switch location. To connect the switch wire inside the cab.
- 5, Install the BLACK(GND) terminals to body frame obtaining Negative pole.(B)
- 6, Using a multi-meter or test light find the ignition switch wire(ACC) in fuse box. Using the "Wire clamp" connector onto this wire. Fit the ACC wire(C) to the "wire clamp". Or fit the ACC wire to the ignition switch fuse directly.
- 7, Connect the RED ring terminal to the positive battery terminal.(A)
- 8, Install the positive wires of driving lights in the Output terminal box. Fix the negative wire of driving lights on the body frame.
Plug the output terminal in the female terminal.
- 9, Insert key in the ACC position, the switch panel show Red light(OFF). Touch the switch to display the Blue light(ON). The new lights have been turned ON.

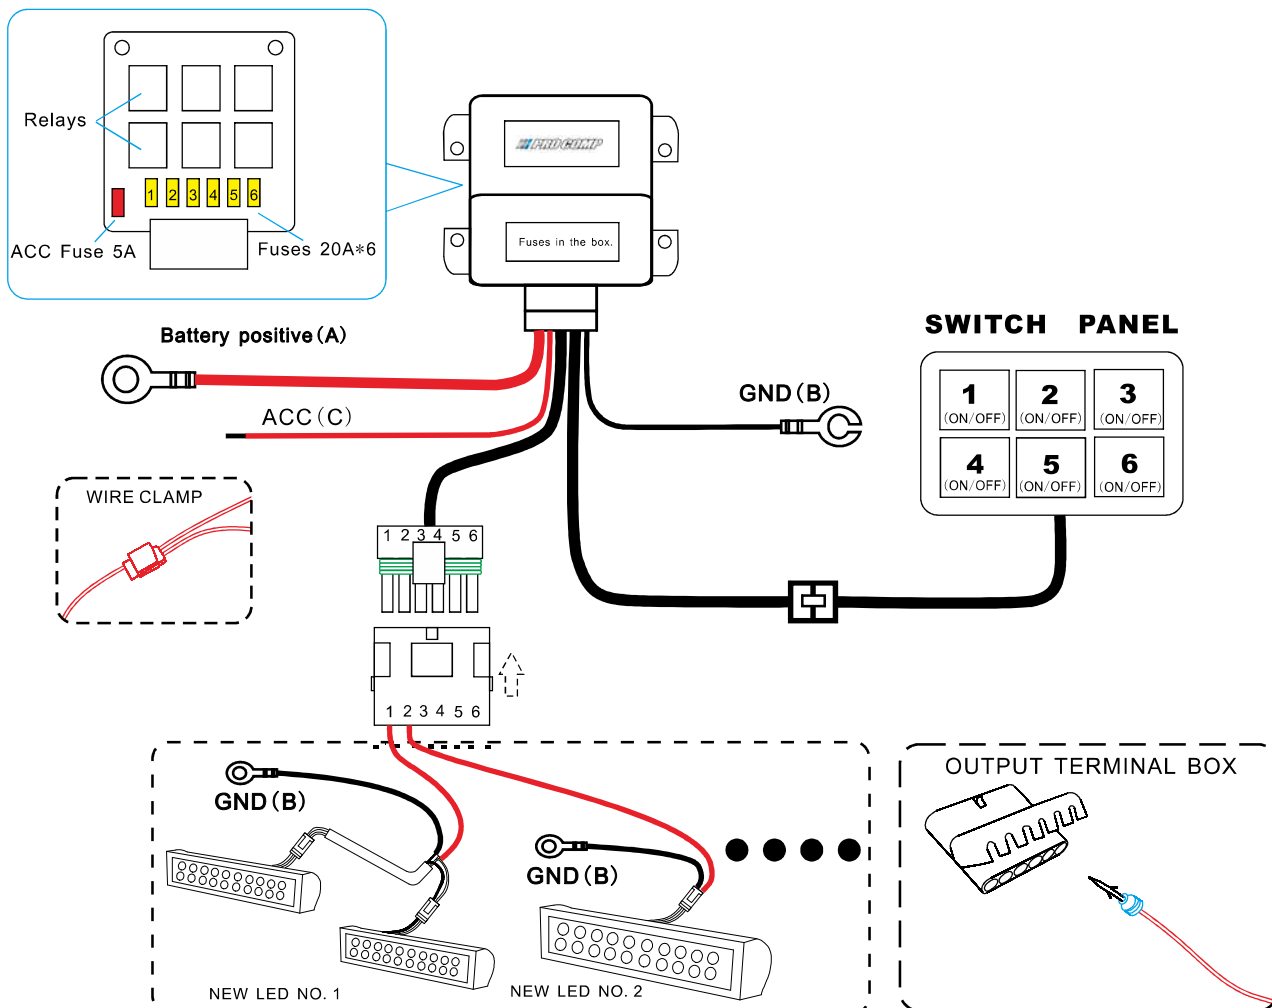

PARTS LIST

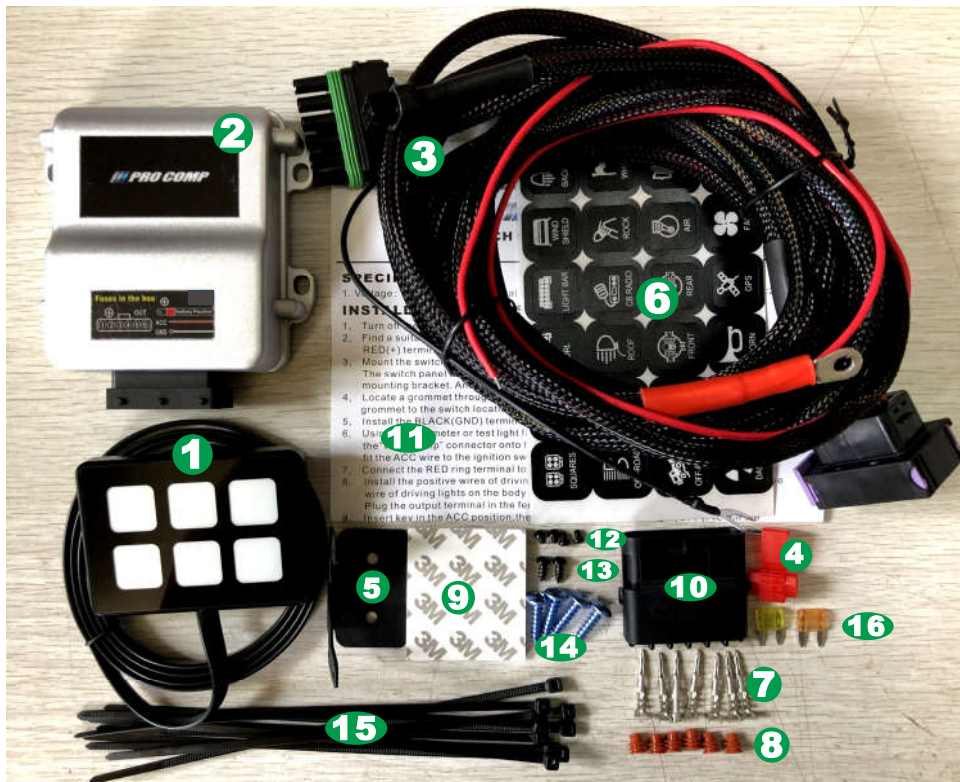

1、 Switch panel	1x	9、 Double-side tape	1x
2、 Control box	1x	10、 Plastic plug	1x
3、 Wiring harness	1x	11、 Instruction	1x
4、 Wire clamp	1x	12、 Bracket screws (M3*4)	4x
5、 Mounting bracket	1x	13、 Bracket screws (M4*10)	2x
6、 Switch sticker	1x	14、 Box Screws (M5*20)	4x
7、 Connector	7x	15、 Cable tie	10x
8、 Rubber plug	6x	16、 Fuse 20A 5A	2x