



BRIGHT IS ONLY THE BEGINNING

# INSTALL GUIDE

## X3B LED THIRD BRAKE LIGHT: TOYOTA 4RUNNER (10-24)

X3B70

### WHAT'S INCLUDED



1 X 3<sup>RD</sup> BRAKE  
LIGHT ASSEMBLY



### REQUIRED TOOLS

- #2 PHILLIPS HEAD SCREWDRIVER
- YOUR PREFERRED DETAIL SPRAY OR PAINT CLEANER

WARNING: IT IS THE INSTALLERS RESPONSIBILITY TO CONFIRM COMPLIANCE WITH STATE AND LOCAL LAWS. BY READING THIS DOCUMENT, YOU AGREE IT IS ONLY TO BE USED AS AN EDUCATIONAL GUIDE. MORIMOTO LIGHTING NOR ITS DEALERS MAKE GUARANTEES ON ANY FINISHED RESULTS, NOR ARE THEY TO BE HELD RESPONSIBLE FOR ANY DAMAGE, MISUSE, OR PERSONAL INJURIES. IF YOU ARE UNABLE TO CLEARLY UNDERSTAND AND ADAPT THE INFORMATION BELOW, PROFESSIONAL INSTALLATION IS RECOMMENDED.



# FACTORY LIGHT REMOVAL

1. REMOVE THE TWO PHILLIPS HEAD SCREWS SECURING YOUR FACTORY 3<sup>RD</sup> BRAKE LIGHT TO THE VEHICLE




2. PULL THE BRAKE LIGHT ASSEMBLY AWAY FROM THE VEHICLE
3. DEPRESS THE TAB ON THE BRAKE LIGHT CONNECTOR AND PULL AWAY FROM THE ASSEMBLY TO DISCONNECT THE PLUG



## X3B INSTALLATION

4. WITH THE 3<sup>RD</sup> BRAKE LIGHT ASSEMBLY REMOVED FROM THE VEHICLE, TAKE THIS TIME TO THOROUGHLY CLEAN UNDERNEATH THE ASSEMBLY. MAKE SURE THE AREA AROUND THE FACTORY WIRING IS CLEAN SO THAT THE NEW HOUSING CAN PROPERLY SEAL AGAINST THE VEHICLE

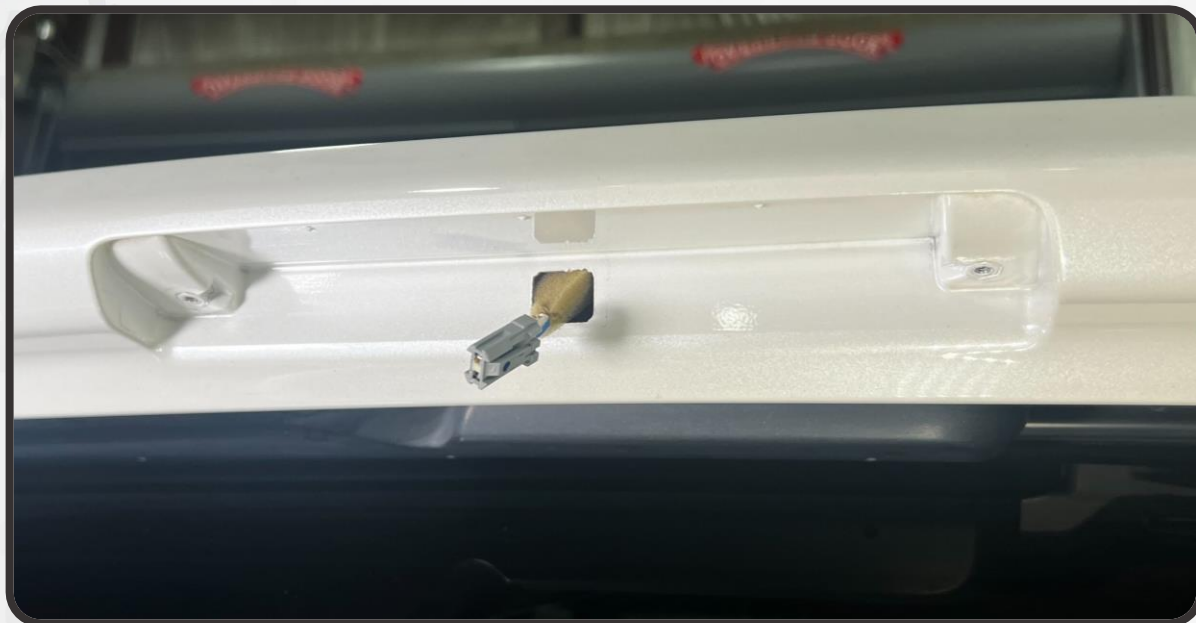

5. CONNECT THE FACTORY 3<sup>RD</sup> BRAKE LIGHT PLUG TO THE NEW MORIMOTO X3B ASSEMBLY



## X3B INSTALLATION

6. SECURE THE NEW BRAKE LIGHT ASSEMBLY TO THE VEHICLE USING THE TWO FACTORY PHILLIPS HEAD SCREWS. TIGHTEN UNTIL HAND TIGHT. DO NOT USE POWER TOOLS, DO NOT OVERTIGHTEN



7. GET IN THE VEHICLE AND CONFIRM THAT THE BRAKE LIGHT IS FUNCTIONING PROPERLY

**- ENJOY YOUR NEW MORIMOTO X3B BRAKE LIGHT! -**

