



BRIGHT IS ONLY THE BEGINNING

# INSTALL GUIDE

## NO-DRILL BANGER MOUNTS: TUBE CLAMP (UNIVERSAL) (SET)

BAFOOTB

### WHAT'S INCLUDED




2x SETS OF TUBE CLAMP MOUNTS



2X MOUNTING ARMS



1X 4MM ALLEN WRENCH

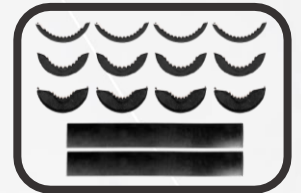


14X (4 SIZES) RUBBER DAMPENERS



2X M10X1.5 CARRIAGE BOLTS



4X M5X0.8 SOCKET CAPPED SCREWS

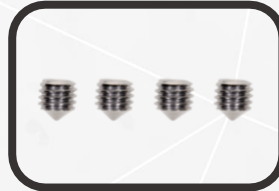

4X M8X1.25 SET SCREWS



2X SPLIT WASHERS



- **REQUIRED TOOLS**
- **4MM ALLEN WRENCH (INCLUDED)**
- **BLUE THREAD LOCKER**


WARNING: IT IS THE INSTALLERS RESPONSIBILITY TO CONFIRM COMPLIANCE WITH STATE AND LOCAL LAWS. BY READING THIS DOCUMENT, YOU AGREE IT IS ONLY TO BE USED AS AN EDUCATIONAL GUIDE. MORIMOTO LIGHTING NOR ITS DEALERS MAKE GUARANTEES ON ANY FINISHED RESULTS, NOR ARE THEY TO BE HELD RESPONSIBLE FOR ANY DAMAGE, MISUSE, OR PERSONAL INJURIES. IF YOU ARE UNABLE TO CLEARLY UNDERSTAND AND ADAPT THE INFORMATION BELOW, PROFESSIONAL INSTALLATION IS RECOMMENDED.

# TUBE CLAMP INSTALLATION

1. POSITION THE TWO HALVES OF THE TUBE-MOUNT CLAMP AROUND YOUR TUBE. SELECT THE APPROPRIATELY SIZED RUBBER DAMPNERS FOR YOUR TUBE. THE CLAMPS FIT TUBE DIAMETERS FROM 0.75" TO 2"




2. APPLY A SMALL AMOUNT OF THREAD LOCKER TO THE THREADS OF TWO OF THE INCLUDED SOCKET CAPPED SCREWS. INSERT ONE OF THE SCREWS INTO EACH OF THE TWO HOLES. SLOWLY TIGHTEN THEM DOWN, ALTERNATING BETWEEN THE TWO TO ENSURE THEY CLAMP DOWN EVENLY. TIGHTEN UNTIL BOTH ARE HAND-TIGHT

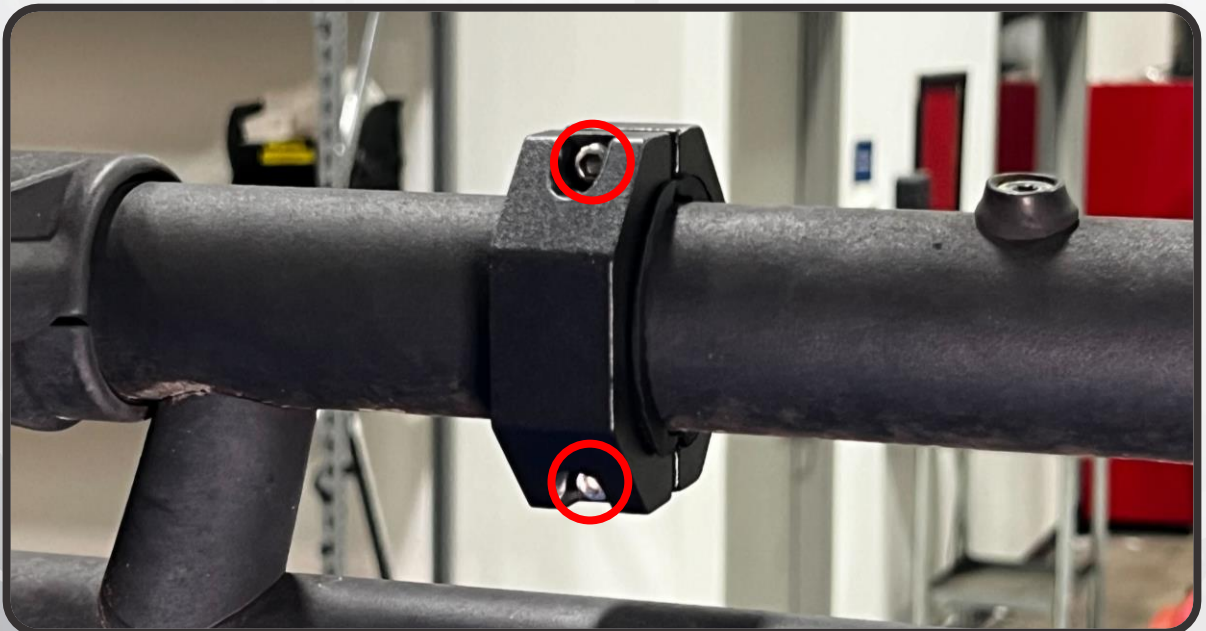

## TUBE CLAMP INSTALLATION

3. INSERT THE MOUNTING ARM INTO THE CLAMP IN YOUR DESIRED ORIENTATION. THERE ARE INDENTATIONS ON THE ARM IN 45° INCREMENTS. ALIGN THESE INDENTATIONS WITH THE TWO HOLES ON THE TOP AND BOTTOM OF THE CLAMP. APPLY A SMALL AMOUNT OF THREAD LOCKER TO TWO OF THE INCLUDED SET SCREWS AND INSERT THEM INTO THE HOLES. TIGHTEN DOWN BOTH UNTIL HAND-TIGHT

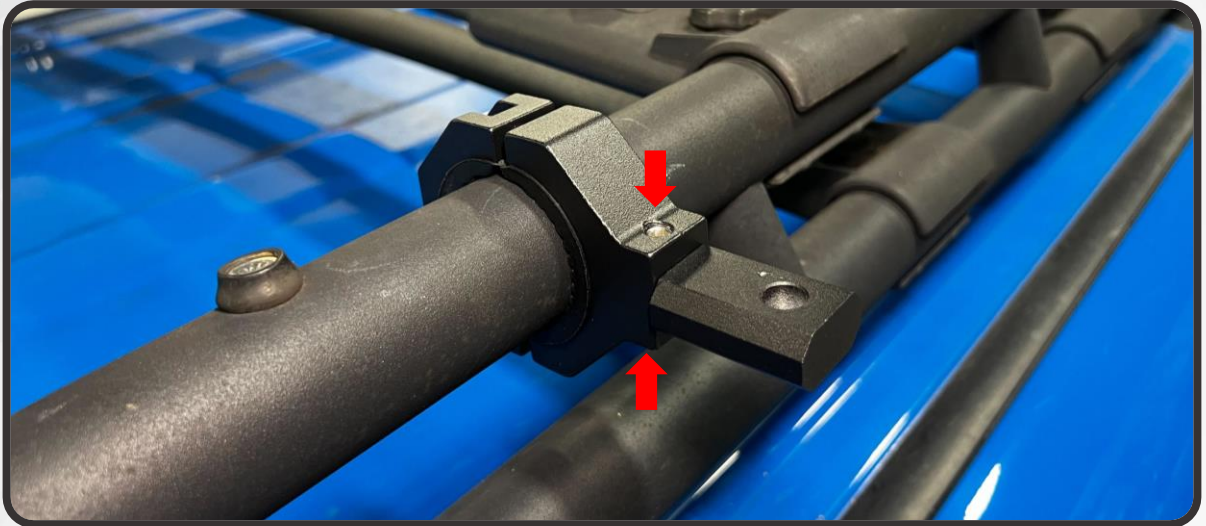

4. INSTALL THE U-BRACKET FOR YOUR DESIRED POD LIGHT ONTO THE MOUNTING ARM OF THE CLAMP. AN EXTENDED CARRIAGE BOLT IS INCLUDED WITH THE KIT TO FIT THROUGH THE MOUNTING ARM. FIT THE INCLUDED SPLIT WASHER BETWEEN THE U-BRACKET AND MOUNTING ARM, AND THE STANDARD WASHER AND LOCK NUT FOR YOUR PODS BENEATH THE MOUNTING ARM



5. INSTALL YOUR POD LIGHT ONTO THE U-BRACKET AND RUN YOUR WIRING
6. CONFIRM THAT ALL FUNCTIONS ARE WORKING PROPERLY AND SET THE AIM OF YOUR PODS

